

## Installation Instructions

### uridan<sup>®</sup> Cadet ceramic urinals - for horizontal drainpipe, type KHC-5.

Installation of the uridan water free urinals is very simple. If you have earlier had water flush urinals, the drainpipe **should** be cleaned before installation of uridan urinals.


uridan<sup>®</sup> urinals work without water, and therefore should only be connected with  $\varnothing$  50 mm drainpipe. Installation should be carried out by authorized plumbers.

1. Install bracket nr. (19). The urinal hangs on these brackets.
2. Make sure the correct distance of 100 mm from the wall to the centre of the pipe.
3. Install bracket nr. (14). The bracket supports the 90° elbow to the drainpipe.
4. uridan<sup>®</sup> urinal should be held against the wall and slide the urinal down over the bracket no. (19) and ensuring the bottom of the waste trap is secure in the waste outlet.
5. Insert the small PVC pipe (B) in the water lock and afterwards pour approximately 1 litre water.
6. Insert the stainless steel cover (A).
7. Then pour 1 bottle - 0,3 litre urilock<sup>®</sup> fluid over the cover.
8. Apply silicon sealant around the edge of the urinal - between the urinal and the wall.

The urinal is ready for use now!

**Important: Never pour urilock<sup>®</sup> fluid before the stainless steel cover is insert.**

Please give the attached cleaning instructions, uriclean and hook to the customer.

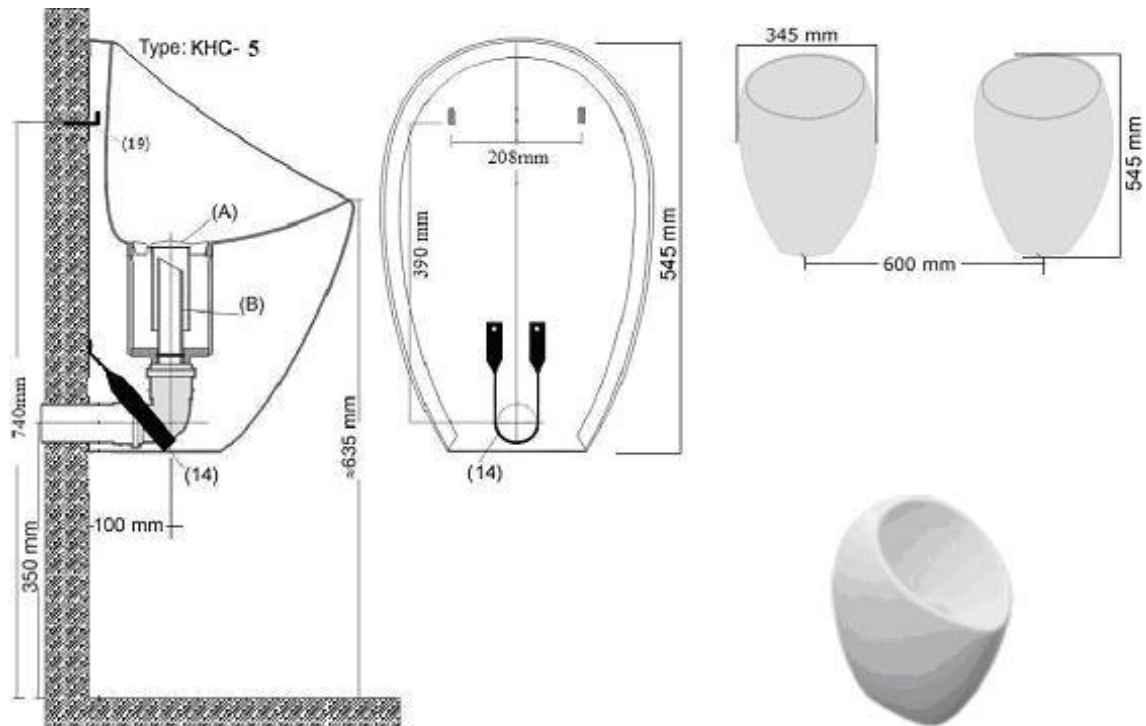

208mm

Borekabelon

